

Holiday regulations in KARWIA.HOLIDAY facilities

1 INSTRUCTIONS FOR USE OF HOME APPLIANCES

1.1 KEYS AND ALARM

Two keys are from the front door and one from the terrace door.

On request, the customer can receive an additional set of keys and a remote control.



The remote control has two buttons:

Red - alarm on

Green – alarm off

After leaving the house, press the Red button and we will hear a triple beep. It means the alarm is on.

Before entering the House, press the Green button and you will hear a triple beep. It means turning off the alarm.

In the event of an alarm siren, please call the Owner as soon as possible to recall the security team.

An unjustified arrival of the security means a fee of PLN 50.

1.2 ELECTRICITY

The house is powered by 230 V electricity.

Only devices operating at 230 V should be connected to the network.

Do not connect devices above 2000 W.

The electrical box is located in a closed technical room and if the power is turned off, please call the Rental Service.

Do not make repairs yourself.

An unsubstantiated call for service involves a fee of PLN 50.

The customer does not incur an additional fee for electricity consumption, unless he uses it for non-tourist purposes.

During the storm, it is recommended to turn off all electricity receivers, i.e. TV, radio, dvd and computers.

The owner is not responsible for damages resulting from power surges in the network.

1.3 DOMESTIC WATER

The house is powered by municipal water, which is suitable for drinking.

The house has utility water in every bathroom and kitchen.

On the outside wall of the house there is a garden tap that you can use.

The customer does not incur an additional fee for water consumption, unless he uses it for non-tourist purposes.

1.4 DOMESTIC HOT WATER

The client has at his disposal hot utility water supplied from a 150 l boiler. It is located in the technical room.

Temporary shortages of hot water may be associated with temporary, increased consumption, e.g. when showering. Just wait about 30 minutes and hot water will be available.

The customer does not incur an additional fee for water consumption, unless he uses it for non-tourist purposes.

1.5 CENTRAL HEATING

The house has underfloor heating on the ground floor and electric heaters in the rooms on the first floor.:

Temperature regulators are located on the walls in the lobby and in the winter garden.



To turn on the heating press the button - the sun

Turning off the heating, press the button - moon

The bathrooms are equipped with electric dryers, which we switch on using the button on the 230V socket. The dryers do not have a thermostat, so please turn them off after drying your clothes.

The owner is not responsible for the destruction of clothes during drying.

1.6 BATHROOM

The bathroom has an Amica washing machine, whose instructions are provided separately.

1.7 KITCHEN

The kitchen is richly equipped with household appliances.

The equipment includes:

- Fridge
- Electrolux hob - manual supplied separately
- Microwave
- Cooker hood
- Pancake maker

1.7.1 Oven



To switch the oven on, turn the knob on the left to set the program and the knob on the right to set the temperature.

The clock should not be moved.

If the orange lamp on the right does not light up, turn the top clock knob to the palm position:

Before starting, make sure that there are no items that do not belong to the oven in the oven, e.g. pan, paper

1.7.2 Dishwasher



After opening the dishwasher, fill it with dishes and insert the washing cube. Do not use anything other than dishwasher cubes. Then press the POWER button (wheel), then select the desired program with the SELECT button and close the door. The

dishwasher will start automatically.

1.7.3 Bosch coffee machine

To make coffee, you should:

1. Pour the coffee beans into the round container at the top of the coffee machine.
2. Pour the filtered water into the container on the left side of the machine.
3. Turn on the POWER button - highlighted in red
4. Place milk under the frothing tube

Capuccino coffee - press the steam button and wait, turn the steam knob on the right side of the espresso machine and the frothed milk will start to flow with the steam nozzle, then move the cup under the main nozzles, select the amount of coffee with the left knob, press the Coffee button) double press will fill two coffees.

Grain button - sets the coffee strength

If you do not use the espresso machine after a dozen or so minutes, it will automatically wash and turn off.

After each frothing milk, the hose and the foaming nozzle should be washed.

1.8 DAILY LIVING ROOM

1.8.1 TV Operation

1. LG TV remote control is used to operate the TV
2. Turn on by turning on the red Power button
3. The television has 18 terrestrial channels
4. To watch USB movies, press the INPUT button and look for the USB input
5. The TV has 3D
6. The television has SMART TV software

1.8.2 1.8.2 Operating the Receiver from DVD

1. Turn the receiver on by pressing the Power button
2. The receiver is operated by a SONY remote control or by buttons on the housing
3. To listen to the radio, press the FUNCTION button until the word TUNER appears
4. To watch the DVD, press the FUNCTION button until the word DVD appears and on the LG TV remote control press the INPUT button and look for the DVD input (until the image from the DVD appears)

1.8.3 NINTENDO console

- The NINTENDO console is controlled by dedicated remote controls.
- Turn on the console by pressing the POWER button on the console. The lamp will change from orange to green.
- To play on the console on the LG TV remote control press the INPUT button and look for the console input (until the image from the console appears)
- Including and controlling games is done using dedicated remote controls.
- Before playing, secure the console remote control on the player's hand, following the instructions on the screen to avoid an accident or damage to the TV



The Customer is responsible for damages resulting from the game!

1.8.4 Fireplace

The house has a fireplace.

Use it with caution.

For burning in the fireplace use only prepared briquettes or hardwood. No smoking in softwood.

Lighting in the fireplace.

In case of cold at home, you can light a fire in the fireplace.

Put briquettes or small pieces of softwood into the hearth and kindle it with a kindling cube.

Then close the fireplace door.

It is important that the damper opens - the handle above the fireplace door must be pulled out and the ash pan door must be ajar.

- After lighting the fireplace, you can push the sunroof handle and close the ash pan door, this extends the burning time.



It is important to pay special attention to children so that they do not touch and do not approach the burning fireplace, do not touch the glass and do not open the fire door.

1.9 BATHS

1.9.1 Launching the baths

1. Top up water to a level about 10 cm from the edge.
2. Load the wood stove in the driveway completely
3. Light up the stove with cubes. you must not use gasoline.
4. After lighting the insert, close the lid to position 3/4
5. You can refill the furnace as the cartridge burns.
6. The optimal temperature for children is 33-36 C
7. Optimal temperature for adults 36-40 C
8. The waiting time for the marked temperature can be from 6 to 10 hours, depending on external weather conditions and the way of burning in the oven.
9. At 40 C do not stay in the baths for more than 30 minutes.
10. Before bathing, remove the chlorine container and put in water after bathing.
11. Water may have small impurities.
12. If the water becomes cloudy, replace it with a new one.
13. Do not smoke in the oven when the water is not flooding it completely.
14. After completing the bath, close the baths cover to maintain temperature and not blowing leaves.
15. Keep the baths clean at all times, without leaves, snails and insects to keep it fresh longer.
16. Do not enter the baths dirty and with sand on the legs.



Dzieci muszą być pod ciągłą kontrolą dorosłych

1.9.2 Replacing the water in a baths

1. Open the cap at the bottom of the baths.
2. Wait for all the water to drain.
3. Wash the baths from dirt.

4. Fill with fresh water.

1.10 TERRACE FURNITURE

The house is equipped with terrace furniture.

They are located in the winter garden, i.e. a bench, sofa, two armchairs, two deckchairs.

They can be stored outside only without pillows, which should be hidden when not using the furniture so that they do not get wet.

1.11 IPHONE SPEAKER

The winter garden has an old-style iPhone speaker. You can connect an iPhone there to charge and listen to music.

1.12 GAMES AND FUN

The winter garden has children's toys and games. If they are out of order, please report them to staff

1.12.1 Playground

The playground is on the property. It is common to all clients of all Karwia.Holiday facilities

There is also a trampoline, sandpit goal and badminton set on the property.

1.13 INTERNET

Free WIFI is available to guests.

5Gb is available per week. If the data limit is exceeded, the Internet will not be available.

Access data for the Internet connection:

Router name:

Password:

2 TABLE OF CONTENTS

1	Instructions for use of home appliances	1	
1.1	Keys and alarm	1	
1.2	Electricity	1	
1.3	Domestic water	2	
1.4	Domestic hot water	2	
1.5	Central heating	2	
1.6	Bathroom	3	
1.7	Kitchen	3	
1.7.1	Oven		3
1.7.2	Dishwasher		4
1.7.3	Bosch coffee machine		4
1.8	Daily living room	4	
1.8.1	TV Operation		4
1.8.2	1.8.2 Operating the Receiver from DVD		5
1.8.3	NINTENDO console		5
1.8.4	Fireplace		5
1.9	Baths	6	
1.9.1	Launching the baths		6
1.9.2	Replacing the water in a baths		6
1.10	Terrace furniture	7	
1.11	iPhone speaker	7	
1.12	Games and fun	7	
1.12.1	Playground		7
1.13	Internet	8	
2	Table of contents	9	